




# Panasonic Toughbook CF-29 Speaker Replacement

Written By: Rohun Heesen

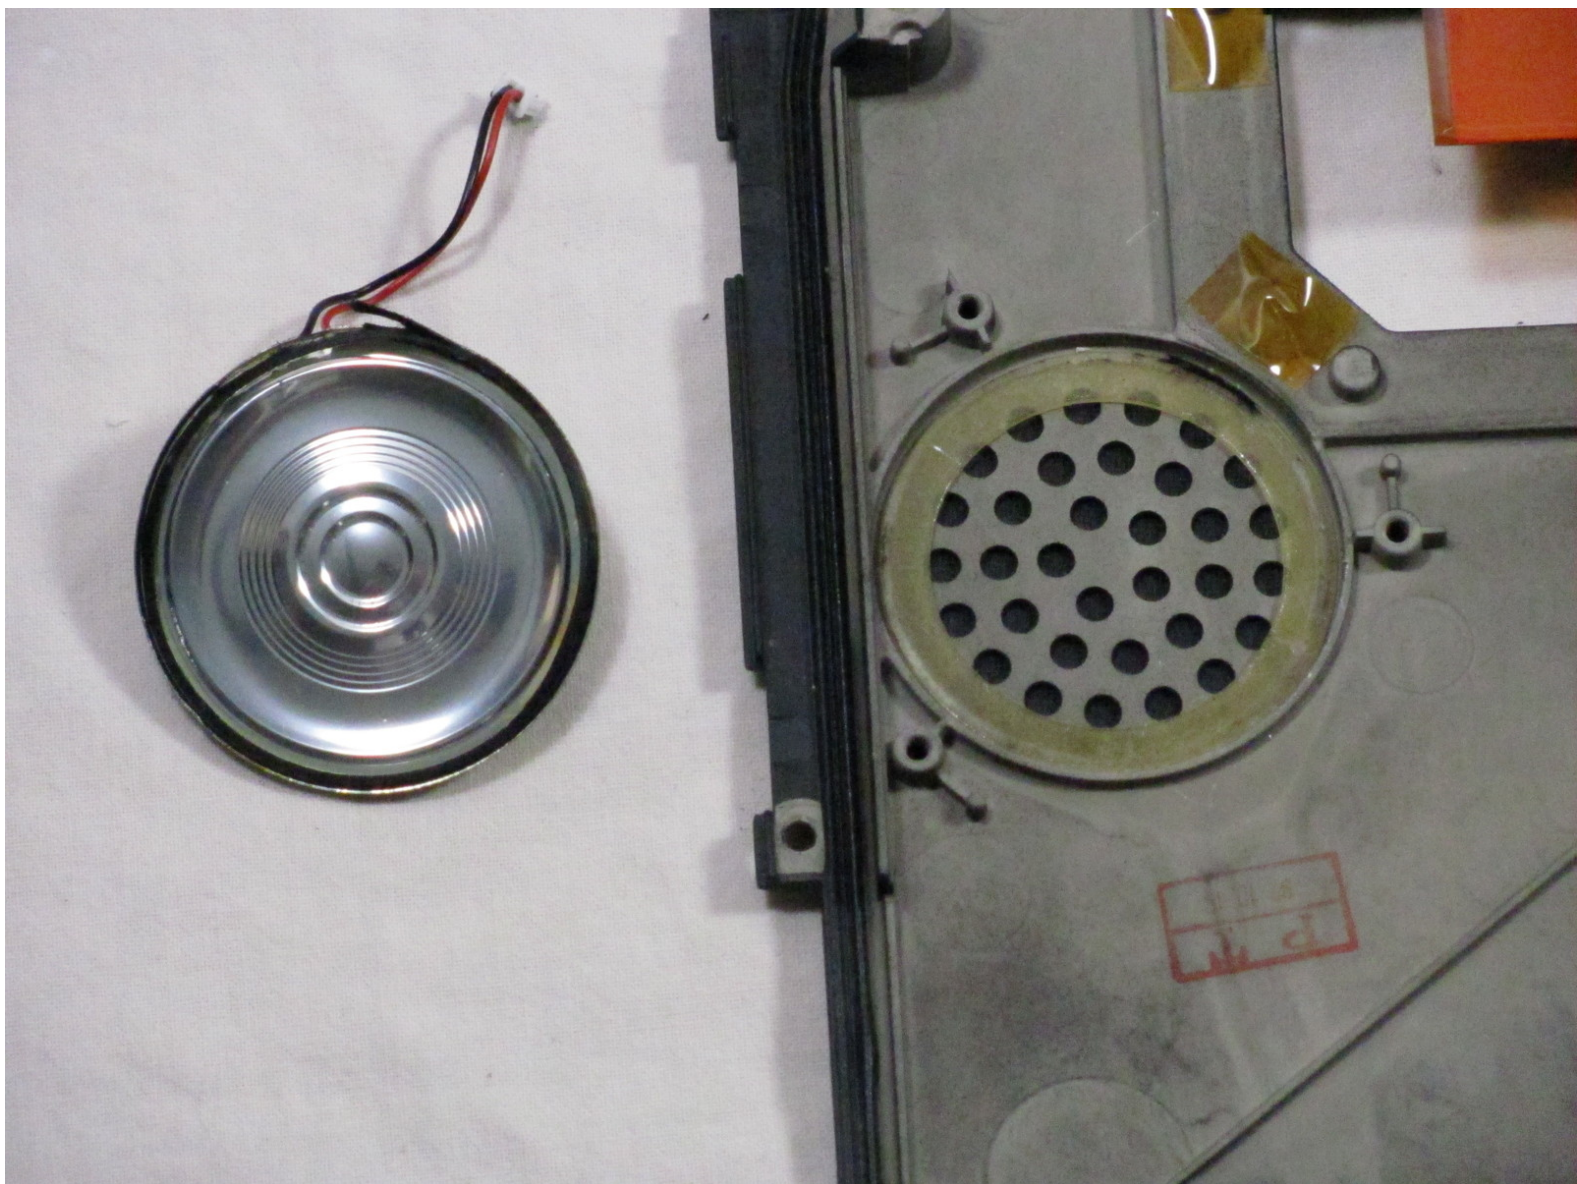

## INTRODUCTION

This guide will provide you with step by step instructions to replace your Toughbook CF-29's speaker.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Locate the bay door for the battery on the left side of the laptop.

## Step 2



- Slide the latch to the right and then down to unlock it.
- Pull out the battery.



## Step 3 — Back Cover



- Begin by turning the laptop upside down with the handle towards you.
- Use a Phillips size 0 screwdriver to remove the 4 screws holding down the ram cover.

## Step 4



- Remove the panel and set it aside.
- Use a Phillips size 0 screwdriver to remove these 8 small screws.

## Step 5



- Use a Phillips size 1 screwdriver to remove the remaining 8 screws.


## Step 6



- Use a plastic opening tool to release, but NOT remove, the back cover because it is sealed with adhesive.



## Step 7

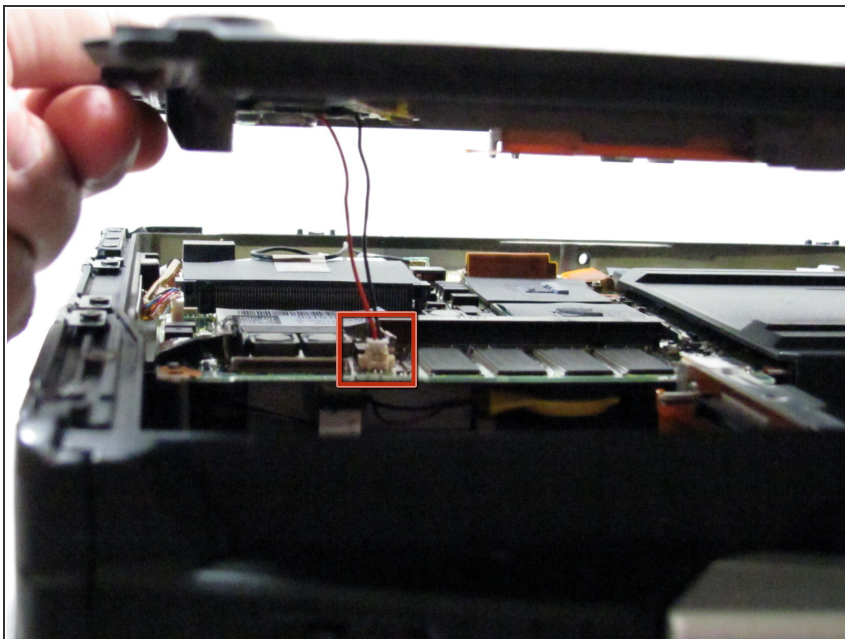


- ⚠ Be careful when lifting the cover as you may damage some connections.
- Slowly lift the cover so that you can disconnect the red and white wires connecting the speaker to the sound card.

## Step 8




- Now the back cover should be off and you can access the inside of the casing.

## Step 9 — Speaker

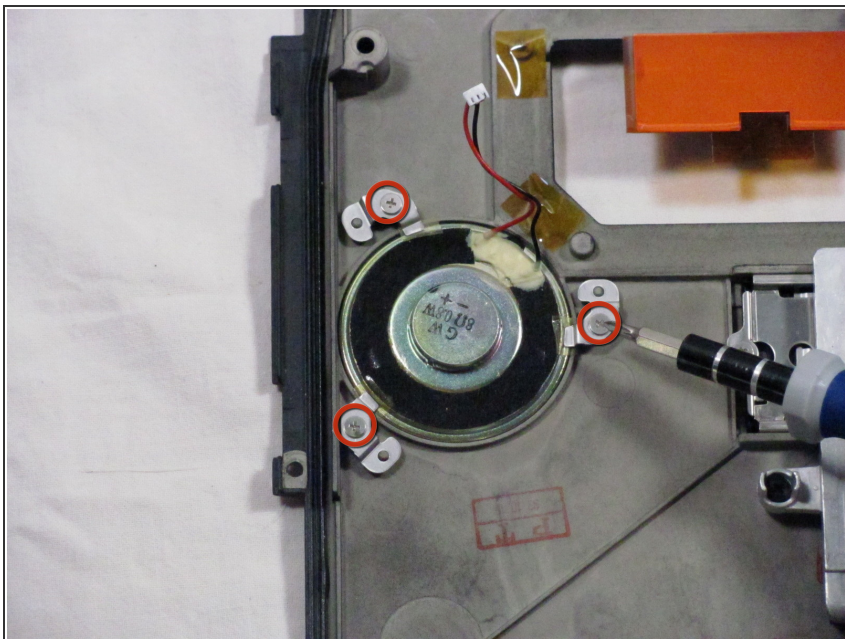


- Place the back cover in front of you so you can access the inside of it.
- Remove the 3 screws holding in the speaker.

## Step 10

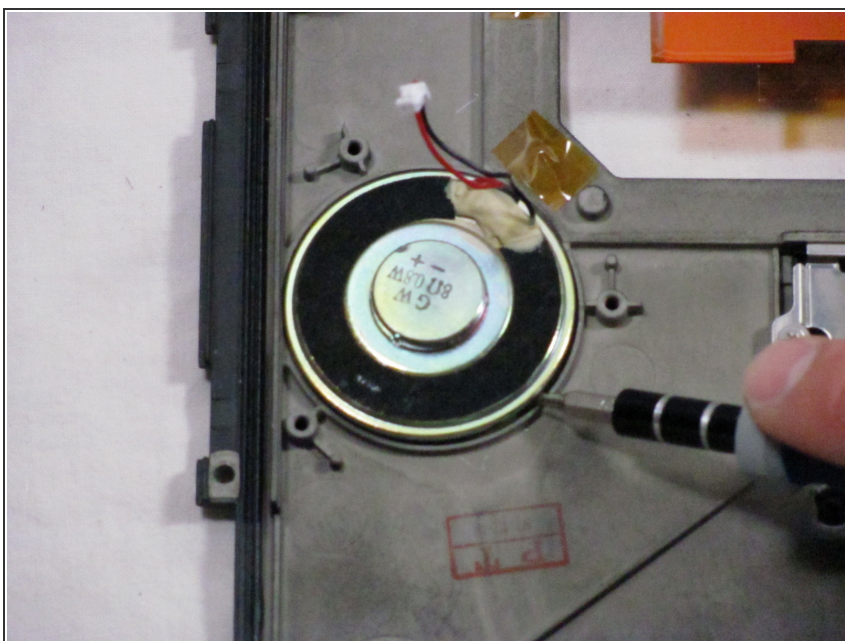

- Pry out the speaker using a flat screw driver or a blue pry tool. It is held in with an adhesive.

## Step 11

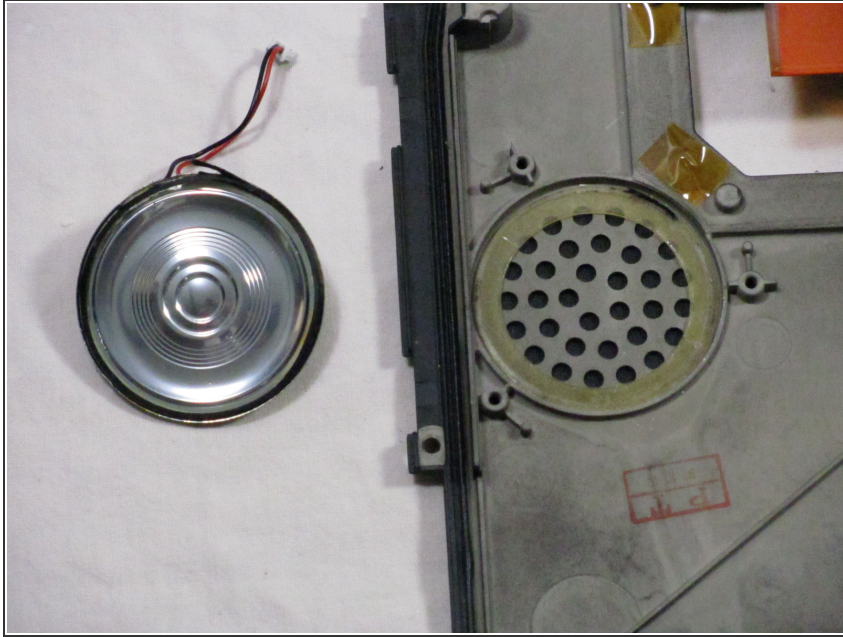

- Your speaker is now removed
- Put in your replacement by following the reverse steps.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 06:08:20 PM.